



## INTRODUCTION

---

**RCVM** is a software for receiving events transmitted in the SIA or Ademco Contact-ID format with the SIA-IP DC-09 protocol.

Events can be received:

- directly from the control panel;
- from the Risco Cloud;
- via the Eureka interface cards.

## SOME FEATURES

---

- Reception of events and sending of commands (bidirectionality);
- System customization with icons, colors, sounds and activations;
- Live view of the cameras;
- Transmission of sms notifications, e-mails;
- Creation of macros for command sequences;
- User management with personalized access;
- Management of the historical archive of events

## BENEFITS

---

### SUPERVISION

The events received by the control panels are shown in a list.

The visualization, acquisition and archiving of each type of event can be configured.

The time and date of acquisition and archiving is stored.

In addition, each type of event can be customized to attract the attention of the operator with colors, sounds and pop-ups.

Filters available, by group, by single control panel and by type of event.

Possibility of **video verification**.

When connected to the Risco Cloud, it is possible to recall the images and videos associated with the events. It is also allowed to view the live stream of the cameras.

Possibility of automatically acquiring the programming of Risco control units (partitions, detectors, relays).

### COMMANDS

Sending commands to the control panels.

When the type of connection is allowed, RCVM makes the operational commands of the control panel available (arming / disarming / disabling / silencing / ...)

### EVENTS HISTORICAL ARCHIVE

All events received are stored in a database.

The archive can be consulted for searches (by date, event, command, control unit, operator).

The data can be exported to excel files allowing for statistical analysis.

### USERS

System management with users whose accesses are personalized:

Possibility to customize the operations of the RCVM management staff (access to the program functions, to the control units, to the video cameras, to the commands that can be sent with or without a password).

## COMPUTER REQUIREMENTS E COMPATIBILITA'

---


	Minimo	Standard
Sistema operativo	Windows XP	Windows 7 / 8 / 10
Processore	Intel Core i3-3220 processor	Intel Core i5 2400
CUP	2 GHz	2.4 GHz
RAM	4 GB	8 GB
Hard Disk	80 GB SATA	250 GB SSD

Il software RCVM è compatibile con tutti i sistemi operativi Windows (XP - 7 - 8 - 10 - Server)

# CONNECTION


## DIRECT

RCVM allows you to receive events directly from the control panels.

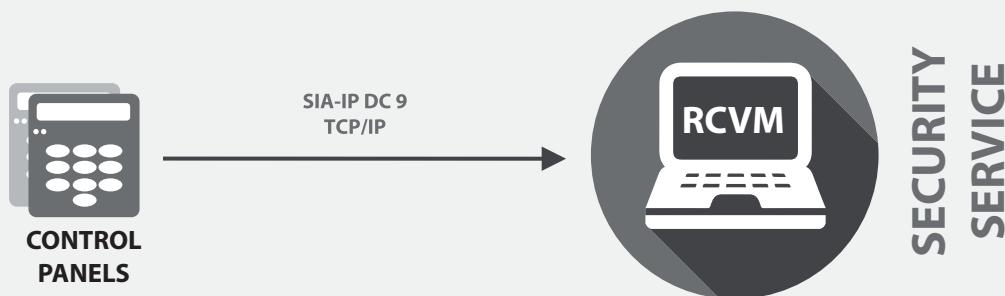


## WITH INTERFACE (bidirectional)

The EUREKA interface, connected to the control panel, converts the events into ADM-CID, transmits them to RCVM and allows you to send commands.

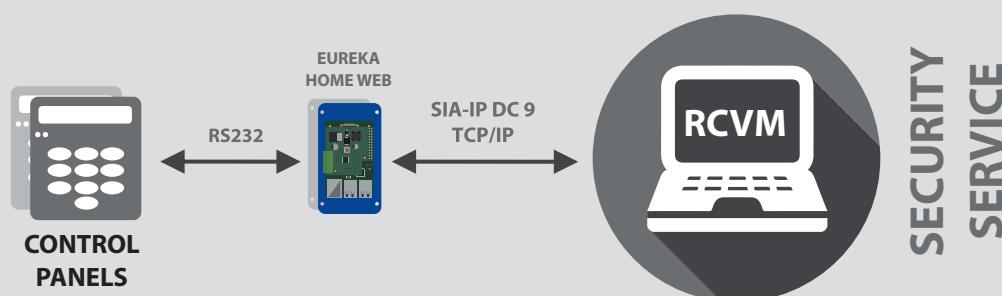

## WITH RISCO CLOUD (bidirectional)

RCVM allows you to send commands and receive events, images and videos from Risco control panels connected to the Cloud.

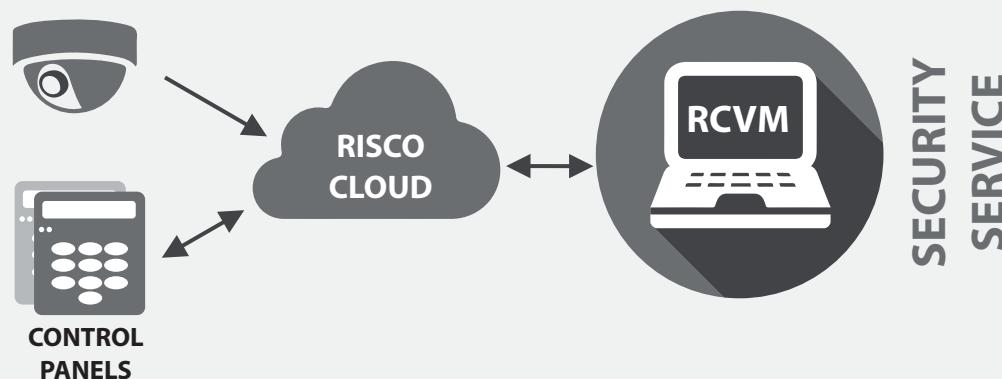

# **EUREKA** C O N N E C T I O N

**[www.eurekaconnection.com](http://www.eurekaconnection.com)**  
[tecnico@eurekaconnection.com](mailto:tecnico@eurekaconnection.com)

EUREKA CONNECTION di Piredda Alessandro  
20151 MILANO (ITALY) – Via dei Cignoli 1 – Tel. +39 347 3159382  
C.C.I.A.A. MI-2108953 – P.IVA IT09710660961 – C.F. PRDLSN61E11I225N